


PERMIT BOX

POST & POST SPIKE INSTALLATION

- 1) INSTALL SPIKE STRIKE INTO TOP OF POST SPIKE
- 2) HAMMER SPIKE ALL THE WAY INTO GROUND
- 3) REMOVE SPIKE STRIKE AND STORE IN BACK OF PERMIT BOX
- 4) ASSEMBLE POST

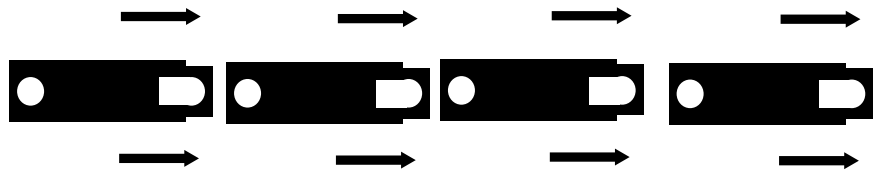

- 5) MOUNT PERMIT BOX

NOTE: MOUNT POST & POST SPIKE ON LEVEL GRADED GROUND. DO NOT SET UP ON AN ANGLE OR ATTEMPT TO DRIVE POST SPIKE INTO HARD OR ROCKY GROUND WITHOUT LOOSENING SOIL FIRST.

